 
 


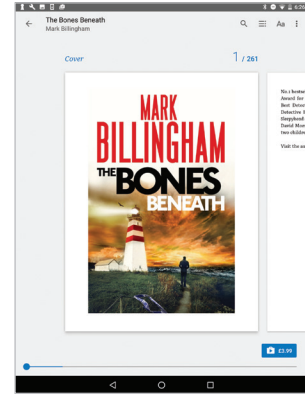

Screen rotation is achieved by a gyroscope sensor in the tablet.

Screen Rotation

By default, the content on a tablet's screen rotates as you rotate the device. This means that the content can be viewed in portrait or landscape mode, depending on what is being used, e.g. for movies it may be preferable to have it in landscape mode, while for reading it may be better in portrait mode:

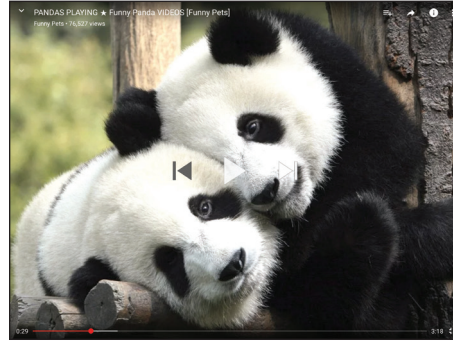

It is also possible to lock the screen so that it does not rotate when you move it. This can be useful if you are using it for a specific task and do not want to be distracted by the screen rotating if you move your hand slightly. To lock and unlock the screen rotation:

- 1 Drag down twice from the top of the screen to access the **Quick Settings**
- 2 Tap on the **Auto-rotate** button to lock screen rotation
- 3 Tap on the **Portrait** button to disable the screen lock and return to Auto-rotate mode

