



The Reachability function is not turned On by default. To enable it, go to **Settings** > **Accessibility** > **Touch** and drag the **Reachability** button **On**, underneath the **Interaction** heading.



For older iPhones that have a physical Home button and run iOS 13, access Reachability by gently double-tapping the Home button, rather than double-clicking.



The **Display & Brightness** settings can also be used to increase the text size for supported apps. Tap once on the **Text Size** button to access a slider with which you can set the required text size.

Reachability

Because of the size of the iPhone 11, the iPhone 11 Pro, and the iPhone 11 Pro Max, it is not always easy to access all items with one hand. This is overcome by a feature known as Reachability, which can be accessed from any screen of the iPhone. This moves the items on the screen to the bottom half, and they can all be accessed from here.

- 1 By default, all items on the screen take up the whole area
- 2 Swipe down on the bottom edge of the screen



- 3 The items on the top half of the screen are moved to the bottom half
- 4 The Reachability effect stays in place for one action; e.g. after you tap on an item, the screen reverts to normal size

