

Using Wake Words

19

Digital voice assistants are constantly listening, waiting for a specific command that alerts them to the fact that a request has been made of them. This is known as a “wake word”. The default wake words for the main digital voice assistants are:


- **Alexa**, for Alexa.
- **Ok Google**, or **Hey Google**, for Google Assistant.
- **Hey Siri**, for Siri.

For Alexa, it is possible to change the wake word:

- 1 Open the Alexa app (see Tip 20) and tap on the **Devices** button on the bottom toolbar



- 2 Select the required device

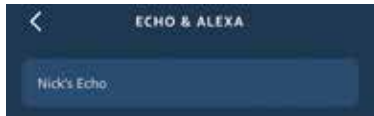

- 3 Tap on the **Wake Word** button



- 4 Select the required wake word for Alexa

